 


Kanandah 7 - Electrolux Tumble Dryer


1. IMPORTANT SAFETY INSTRUCTIONS

1.1 Cleaning The Lint Filter

A clean lint filter reduces drying times, saves energy and avoids overheating. Overheating may also damage your clothes.

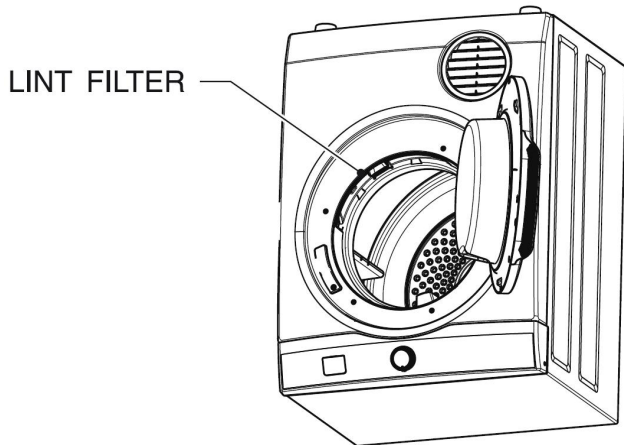


The lint filter is located at the front of your dryer at the top of the door opening.

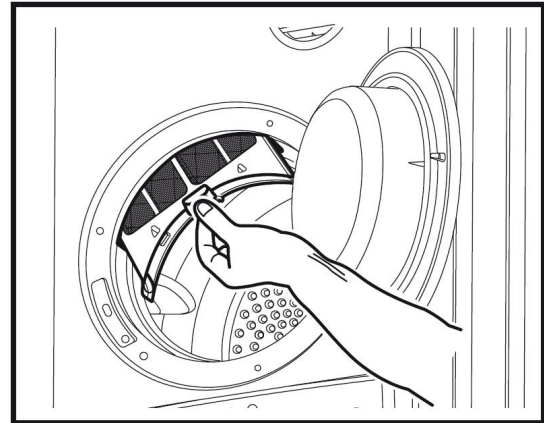

You must clean this lint filter after every load.

To remove the lint filter :
open the door and press the two pads together.
Pull the lint filter out of the pocket.

Open apart the lint filter and wipe or peel off the lint.

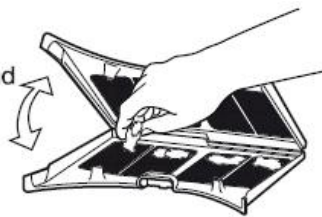


Ensure the lint filter “Clicks” when replacing.

- Never operate your dryer without the lint filter.
- Do not allow lint to build around your dryer.
- A torn or damaged lint filter must be replaced immediately.
- Overloading can increase lint build-up because the airflow is reduced.

2. The Control Panel

1 PROGRAM SELECTOR KNOB

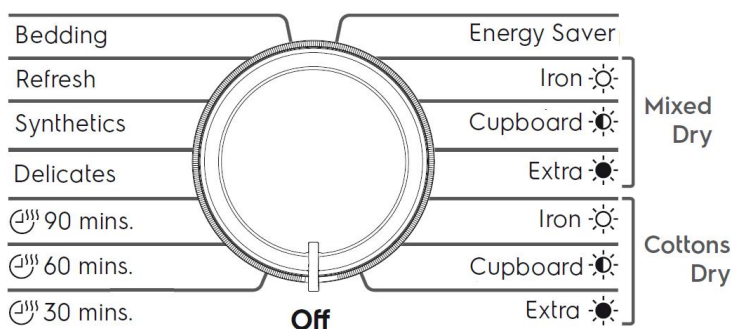

Turn the Program Selector knob to choose a drying program.

The table “**Program Guide**” shown on page 3 will help you in selecting the right program.

Kanandah 7 - Electrolux Tumble Dryer

3. Operating Sequence

Step 1

Load your dryer loosely until it is no more than **TWO THIRDS FULL**.

Clothes must tumble freely in a dryer. Don't cram them in.

Wet clothes fluff up when dry.

Overloading will :

Reduce efficiency Increase drying time

Increase the risk of creasing.

Step 2

Switch On

The dryer will not operate unless the door is fully pressed in.

Step 3

Turn the Program Selector knob to choose drying program you want.

Step 4

Turn the Program Selector knob to **"OFF"** when you have finished using the dryer.

It is recommended to power off the appliance when not in use (switch off at the power point).

Step 5

Clean Lint Filter

After every load clean the lint filter to reduce drying time and avoid overheating.

Kanandah 7 - Electrolux Tumble Dryer

Program Guide

Program	Load Size Info	Textile Type Info
Off	-	This position to reset program/switching off the machine.
Cottons Dry		
☀ Extra	Full	For thick fabrics, Cotton Towel, Jeans.
☀ Cupboard	Full	For fabric that do not need to be ironed, Cotton underwear.
☀ Iron	Full	For fabric that do need ironed, Cotton Polo shirt, Cotton T-Shirt.
Mixed Dry		
☀ Extra	Half	For thick fabrics, mixed load consisting of Cotton and Synthetic.
☀ Cupboard	Half	For fabrics that do not need to be ironed, mixed load consisting of Cotton and Synthetic.
☀ Iron	Half	For fabrics that do need to be ironed, mixed load consisting of Cotton and Synthetic.
Energy Saver	Full	Cycle to be used to dry cotton with “Cotton Cupboard” dryness level, with maximum energy saving.
Time Dry		
⌚ 30 mins.	1.0 - 1.5 kg	For Cotton fabric selected drying time for 30 minutes.
⌚ 60 mins.	3.0 kg	For Cotton fabric selected drying time for 60 minutes.
⌚ 90 mins.	4.0 kg	For Cotton fabric selected drying time for 90 minutes.
Delicates	3.5 kg	For delicates fabrics that are heat-sensitive, Silk, Fine Fabrics and Lingerie.
Synthetics	3.5 kg	For Polyester fabric, normal synthetic.
Refresh	5 pcs.	For fabrics that have been in storage long time, normal synthetic that need to be damp after.
Bedding	Half	For Bedding items.